


## HTY503 og HTY505 SERIE

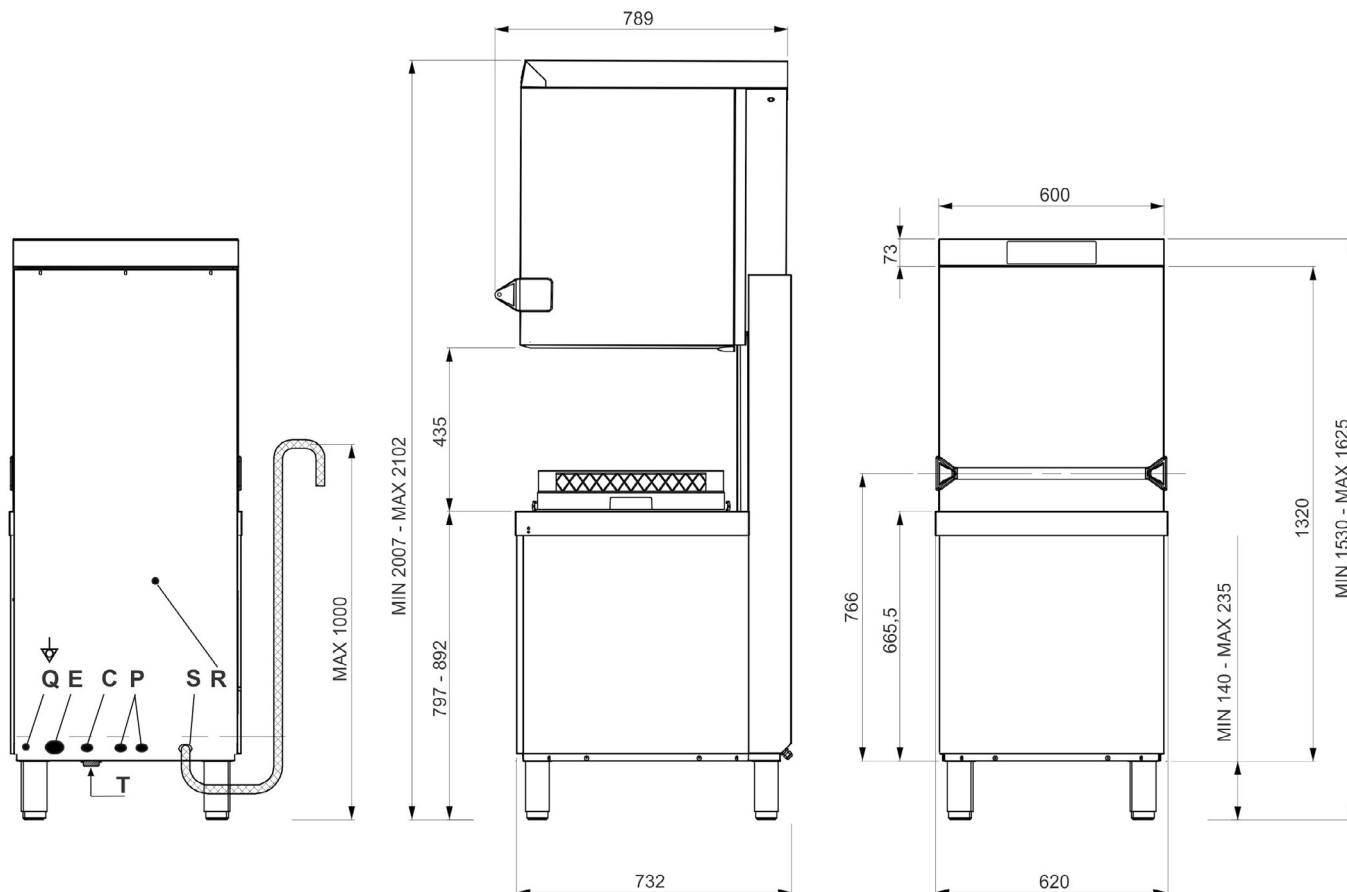

|          |                                         |
|----------|-----------------------------------------|
| <b>R</b> | Rear lower panel                        |
| <b>C</b> | Water supply tubing                     |
| <b>S</b> | Water drain tubing                      |
| <b>Q</b> | Equipotential terminal                  |
| <b>P</b> | Peristaltic doser                       |
| <b>E</b> | Electrical power cable                  |
| <b>T</b> | External doser power supply cable input |